




MEASURING FOR DRAPERY


STEP 1: CHOOSE A SINGLE PANEL OR PAIR?

COVERAGE SINGLE PANEL (Left, Right or Center)

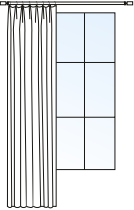

- Made to cover an entire span or as a decorative stationary panel
- Overlaps and returns are added to ordering width by workroom.

PAIR (2 Equal Panels)

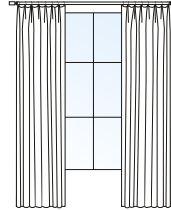

- The total width coverage you specify will be automatically divided in 2. Usually made to be functional panels.
- Overlaps and returns are added to ordering width by workroom.
- If you want an "unequal pair" order each panel individually as single panels.

STEP 2: SELECT TOTAL DRAPERY WIDTH COVERAGE

- Measure the width of the area you would like to cover.

Tips: We recommend whenever possible to extend out from the edges of your window or doors as much as 6" - 12" on each side. This will help make the area look larger, and will also maintain as much natural light as possible when the Drapery panels are open.

STEP 3: SELECT FINISHED DRAPERY LENGTH

- Take the measurement from the top of where you will mount the hardware to the floor (for wall mount) or from ceiling to floor (for ceiling mount).

Workroom Note:

- As with all fabrics made of natural fibers, there may be slight changes in the fabric over time due to a number of variables including humidity, temperature and moisture. This is considered normal. If this is a concern, consider ordering a length that includes a small puddle.
- Synthetic materials stretch less.